

GSM Network Level

When it is required to check Signal Network Level of the charger locally, follow the below steps. .

Step-by-step guide

1. Connect to the charger with a laptop and open the master controller state page: [Connect laptop to the CC1612 controller](#)
2. Go to the state page and see the " Receive Signal Strength Indicate (RSSI):

Receive Signal Strength Indicated (RSSI)	15	Receive Signal Strength Indicator as reported by the modem. This parameter is an indication how well the built-in modem can receive signals from the base station. Values meaning: [0: Extremely low], [1: Very low], [2-12: Low], [13-30: Good], [99: Unknown or undetectable]
--	----	---

Value	Level Signal
Extremely Low	0
Very Low	1
Low	Between 2 and 12
Good	Between 13 and 30